

RZA PAGE 6 EXACT APP ALIGN VALIDATION SUITE v5

- t Page 6 from RZA v1.32g master 10-page production pack.

Purpose: date APP ALIGN, before/after photo use, group centroid math, flyer handling, and future 4-point align

s at EXACTLY 100% scale. Disable fit-to-page/scaling.

Use the CLEAN BASELINE page for the clean target photo.

Use each test page as the final/after photo. Enter the printed marks as shot impacts in order.

Assumptions for expected values: 100 yards, 1 inch $\approx$ 1 MOA, 1/4 MOA clicks.

Test A: realistic 5-shot group, centroid 1.0 low / 1.0 right.

Test B: vertical stringing, centroid 1.5 low.


Test C: diagonal stringing, centroid 0.75 high / 1.25 left.

Test D: flyer handling. If flyer is excluded, core centroid is 0.75 low / 0.75 right.

Test E: future 4-point APP ALIGN / perspective-correction prep marks.

This is a validation instrument. It is not meant to replace live-fire confirmation.

LIGHT HIGH VIS + COORDINATE - BANDED

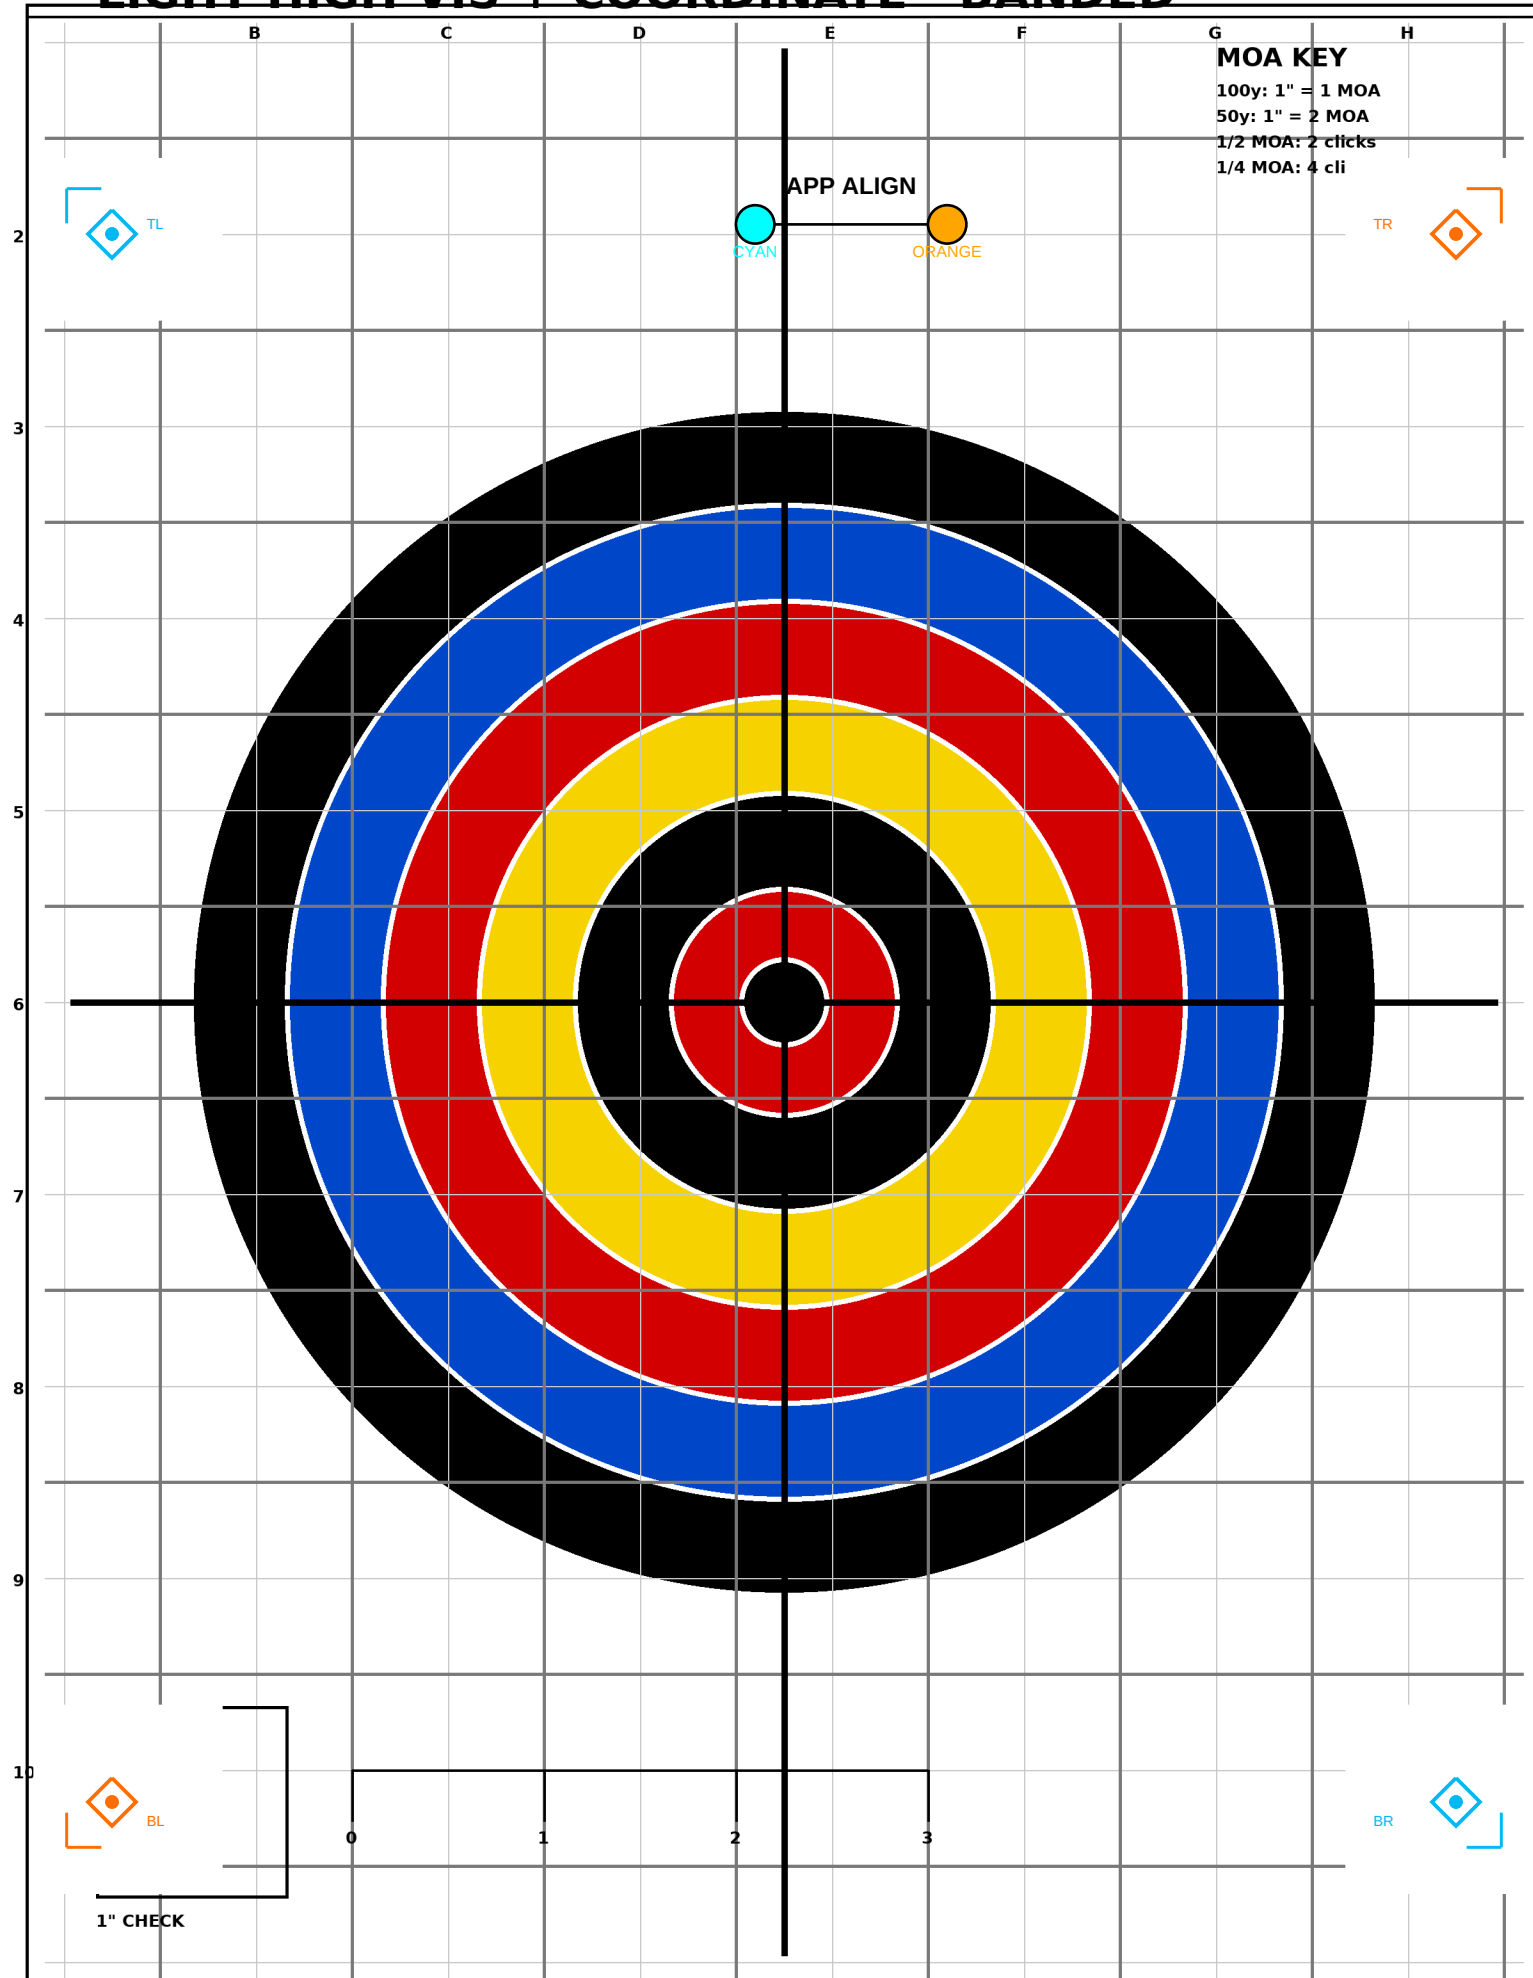

CLEAN BASELINE - EXACT PAGE 6 WITH PRODUCTION APP ALIGN


4-POINT APP ALIGN READY - 2-POINT FALLBACK RETAINED

LIGHT HIGH VIS + COORDINATE - BANDED

TEST A - REALISTIC 5-SHOT GROUP - CENTROID 1.0 LOW / 1.0 RIGHT

Expected: ~1.0 MOA UP / ~1.0 MOA LEFT

At 1/4 MOA clicks: approx 4 UP / 4 LEFT.

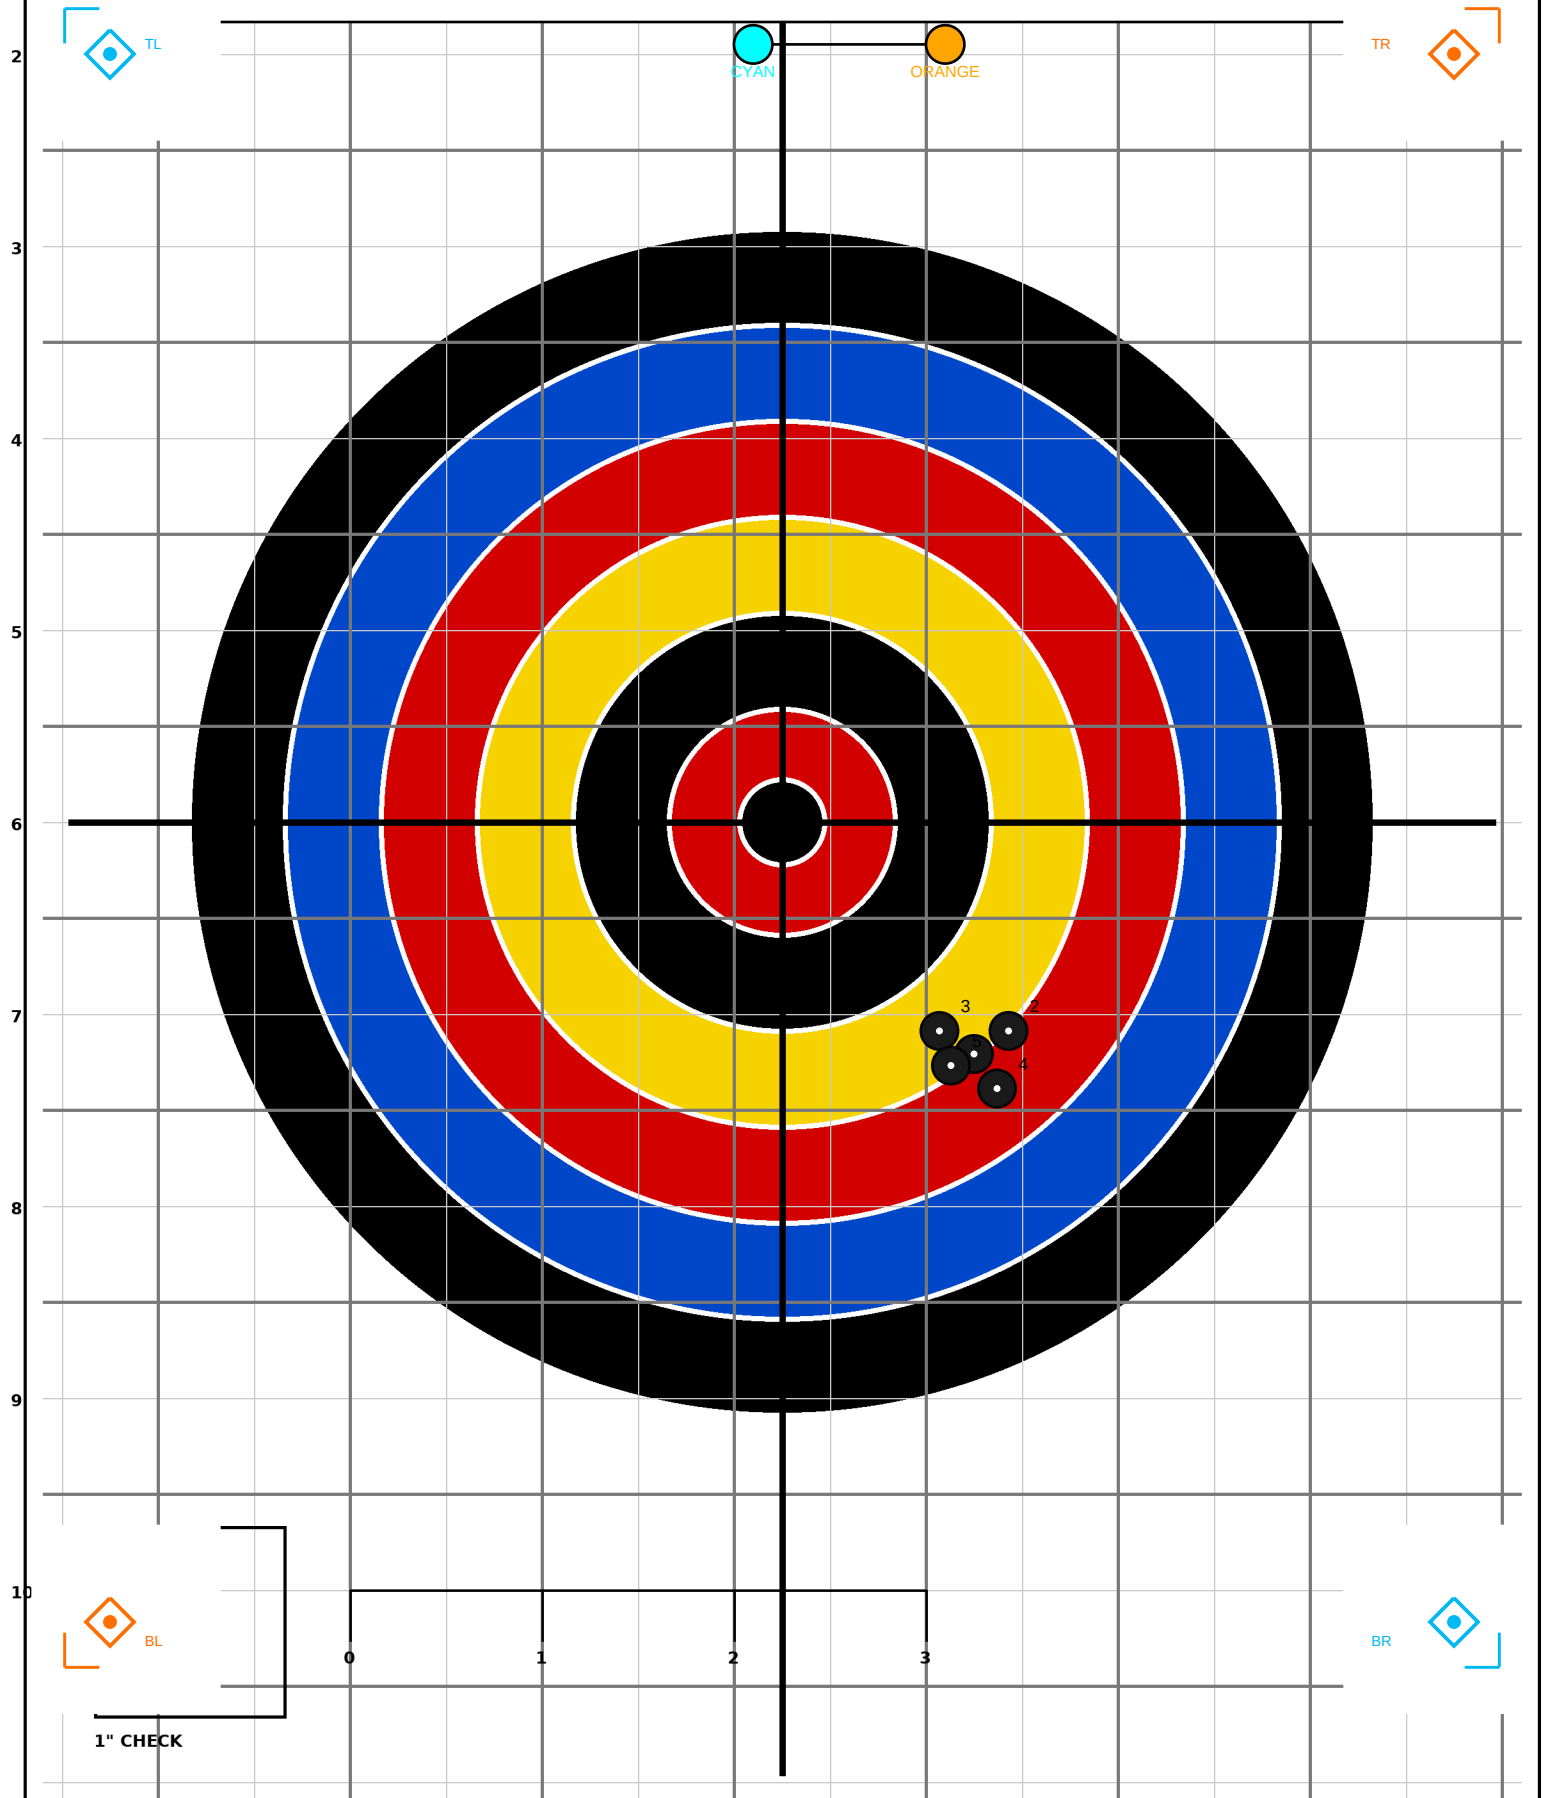

TEST A - REALISTIC 5-SHOT GROUP - CENTROID 1.0 LOW / 1.0 RIGHT


4-POINT APP ALIGN READY - 2-POINT FALLBACK RETAINED

LIGHT HIGH VIS + COORDINATE - BANDED

TEST B - VERTICAL STRINGING - CENTROID 1.5 LOW

Expected: ~1.5 MOA UP / near zero windage

At 1/4 MOA clicks: approx 6 UP.

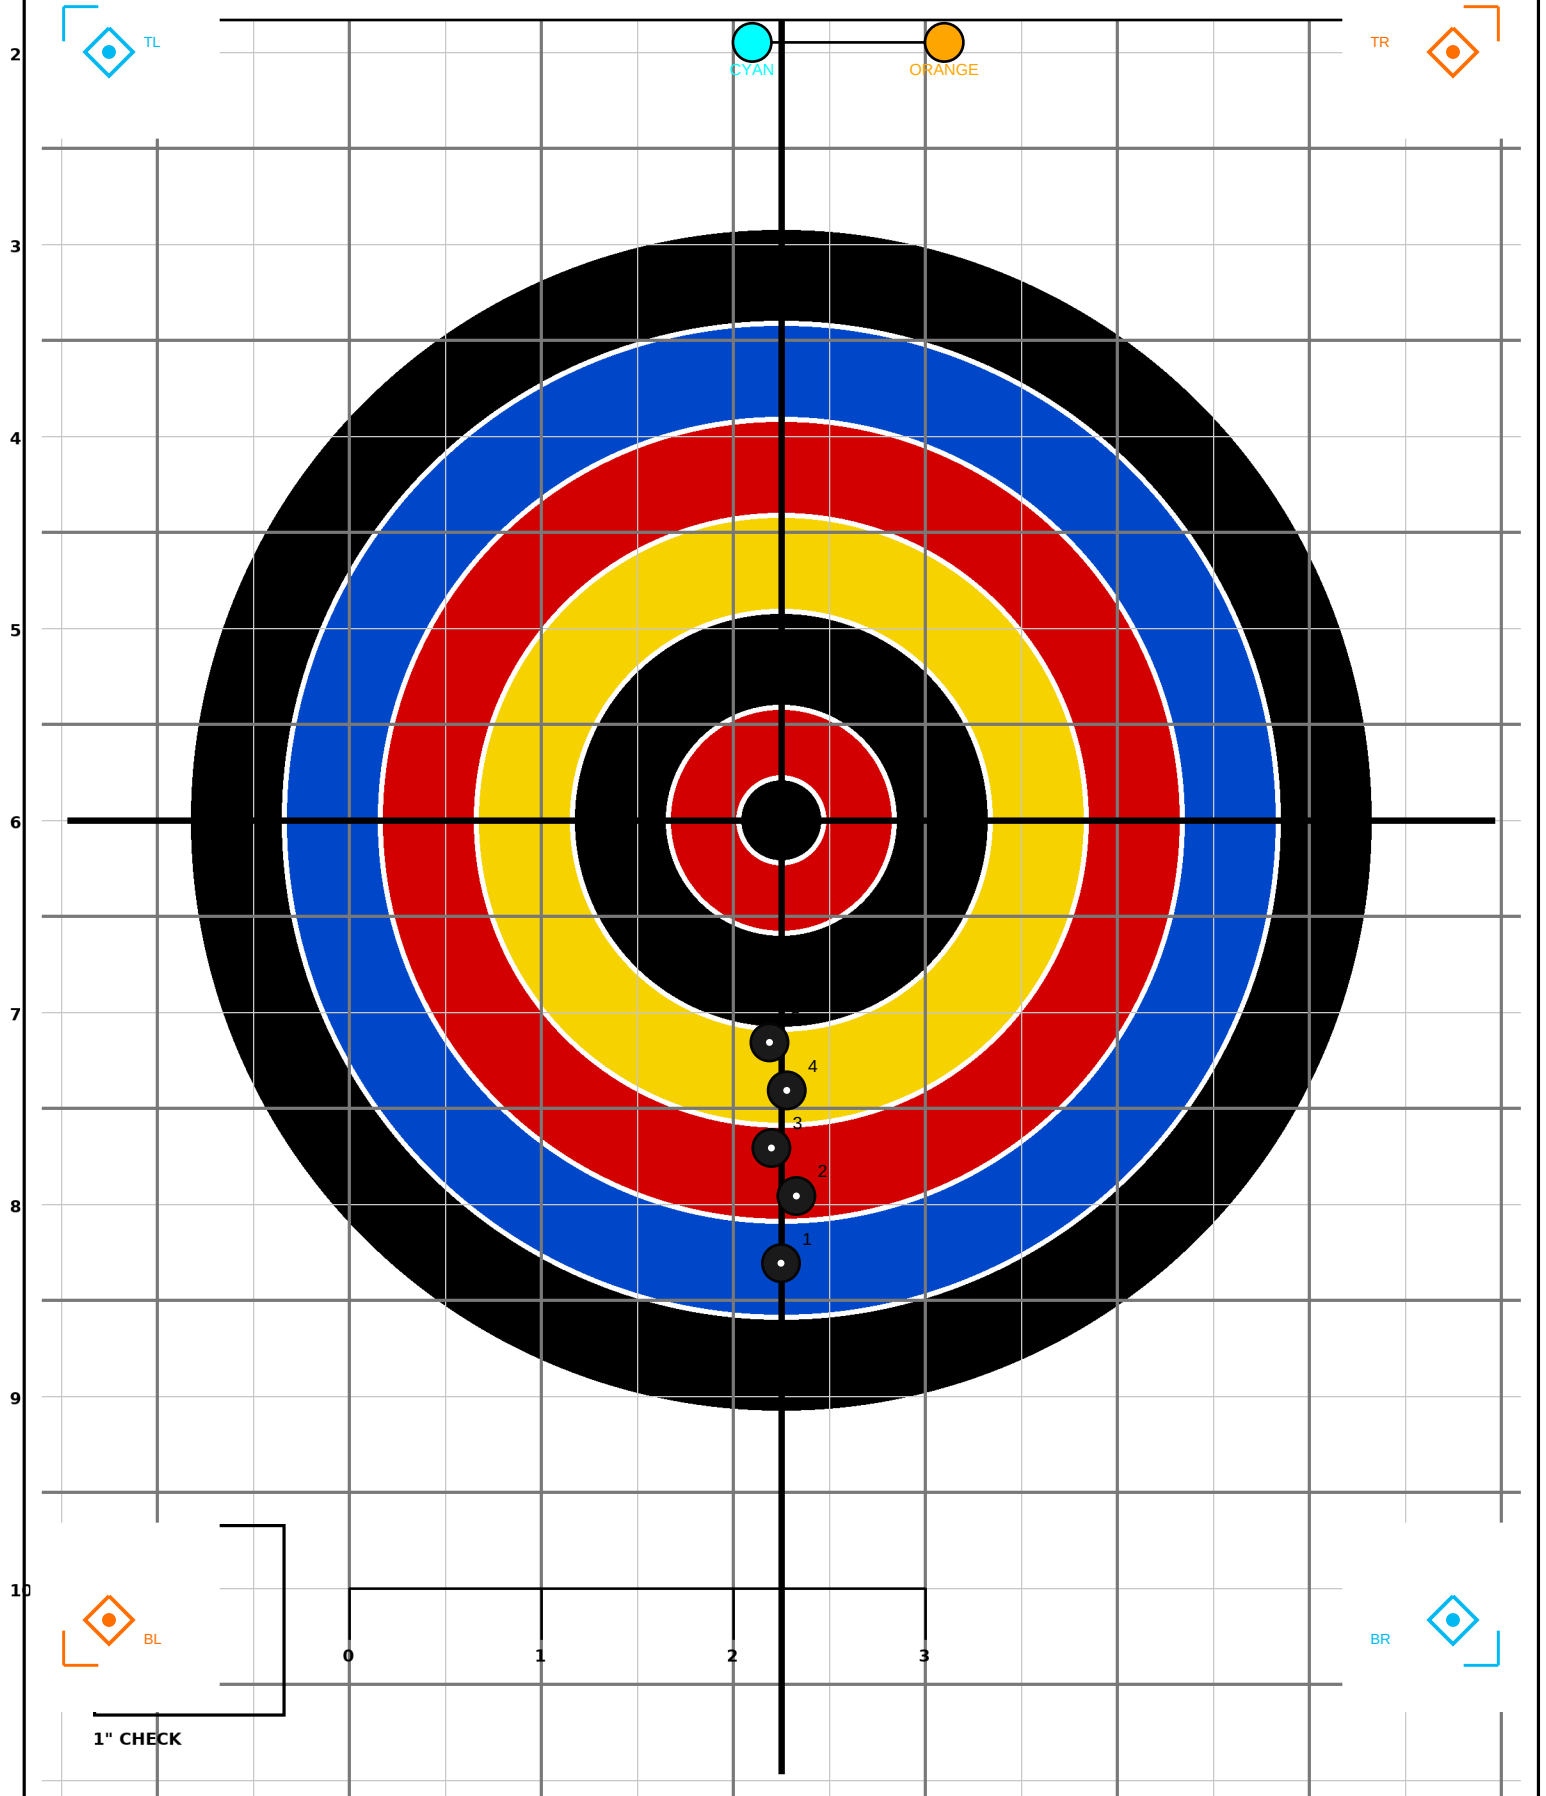

TEST B - VERTICAL STRINGING - CENTROID 1.5 LOW


4-POINT APP ALIGN READY - 2-POINT FALLBACK RETAINED

LIGHT HIGH VIS + COORDINATE - BANDED

TEST C - DIAGONAL STRINGING - CENTROID 0.75 HIGH / 1.25 LEFT

Expected: ~0.75 MOA DOWN / ~1.25 MOA RIGHT

At 1/4 MOA clicks: approx 3 DOWN / 5 RIGHT.

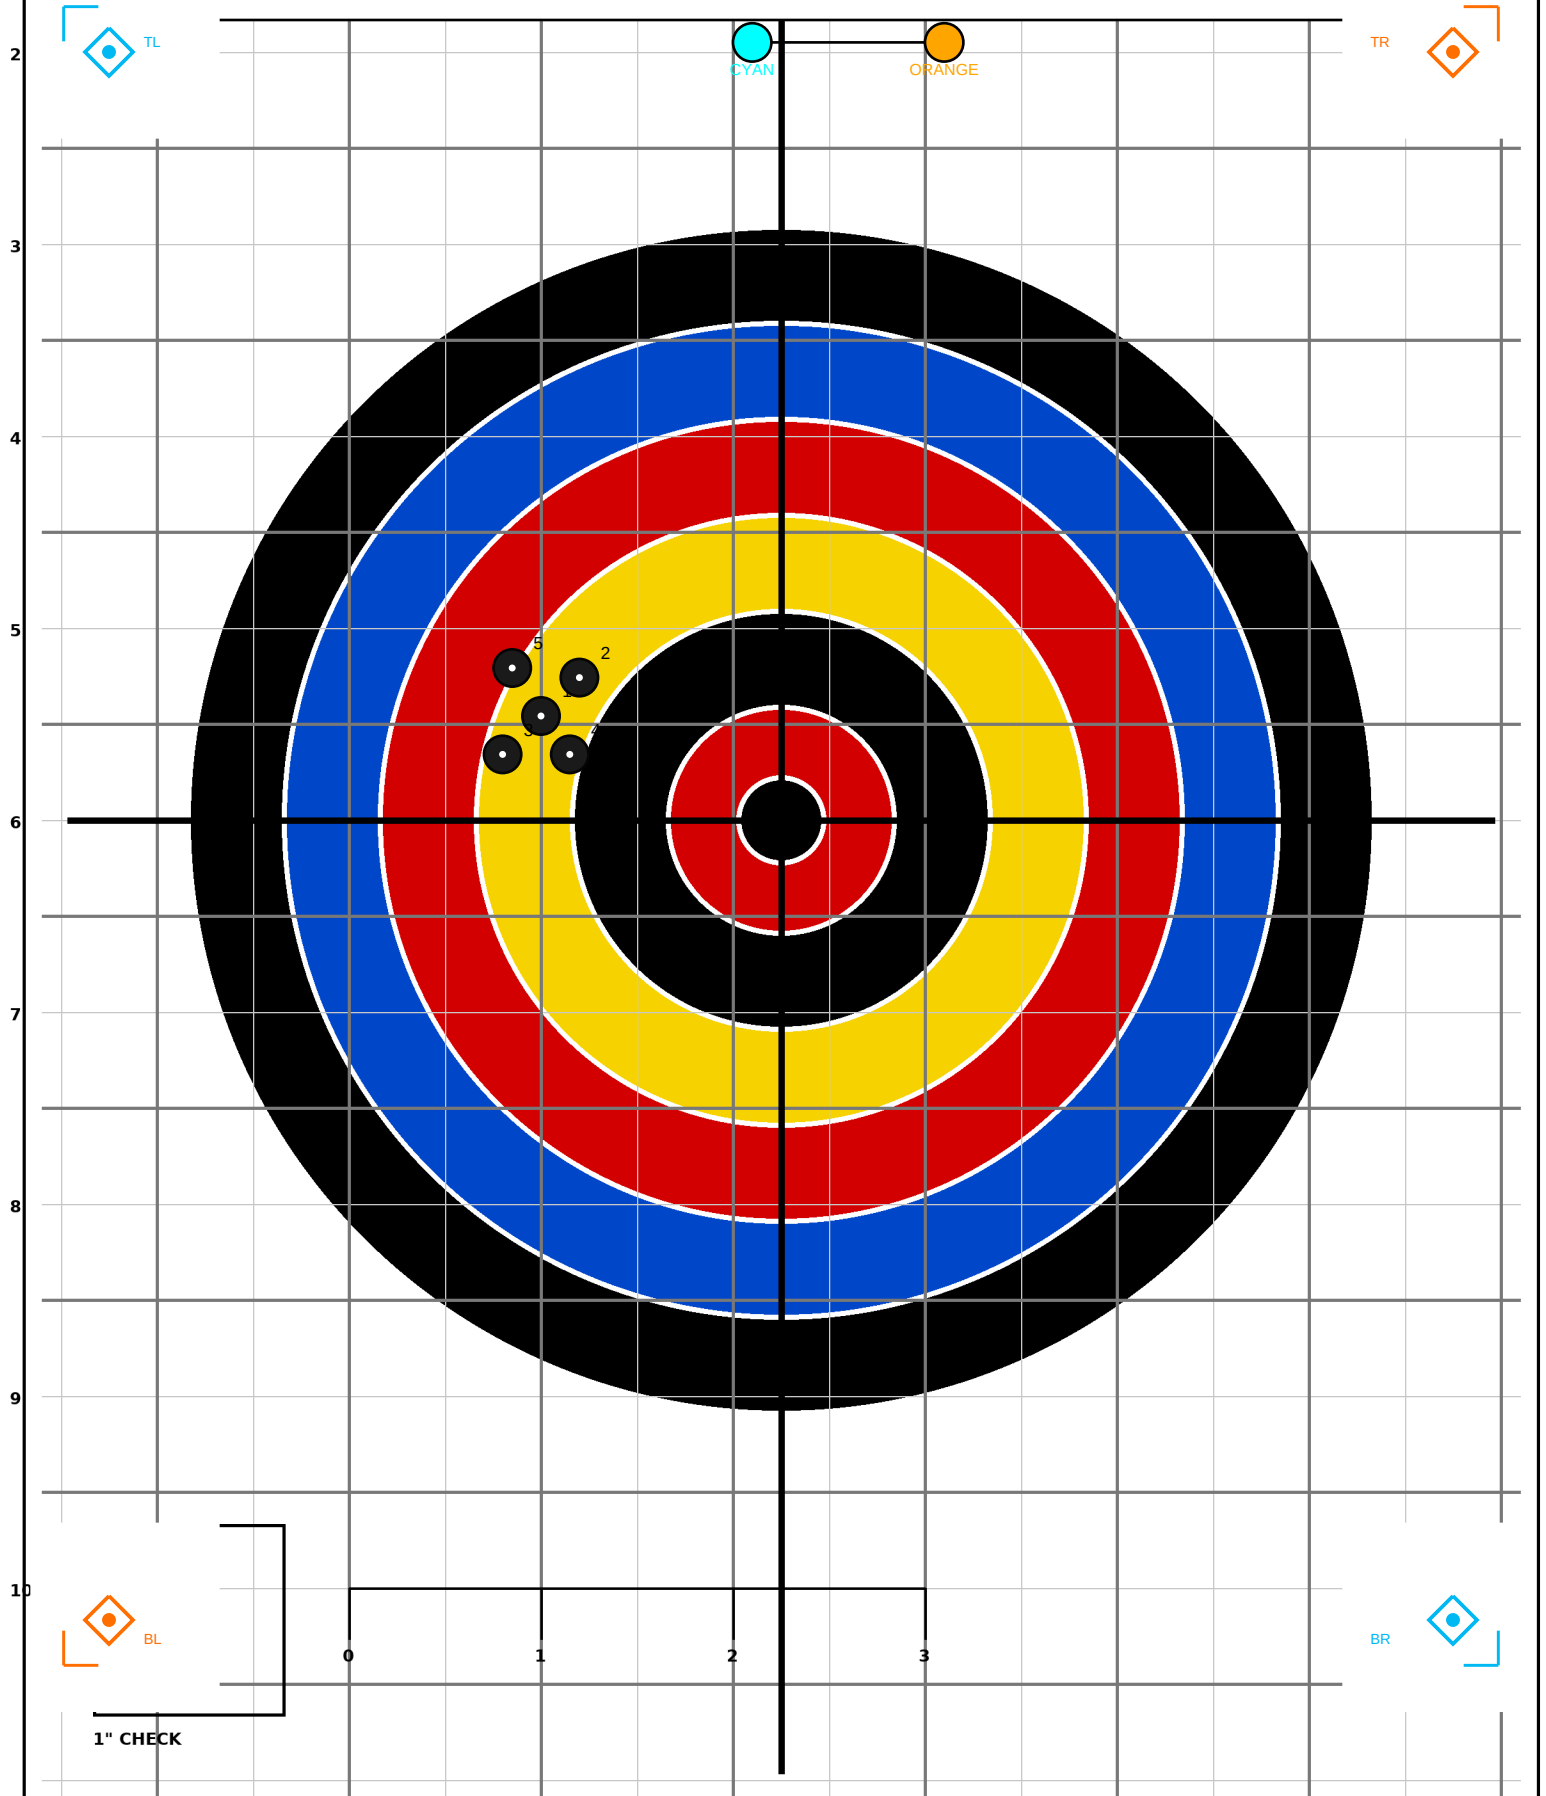

TEST C - DIAGONAL STRINGING - CENTROID 0.75 HIGH / 1.25 LEFT


4-POINT APP ALIGN READY - 2-POINT FALLBACK RETAINED

LIGHT HIGH VIS + COORDINATE - BANDED

TEST D - FLYER HANDLING - SHOT 5 IS THE FLYER

If Shot 5 excluded: ~0.75 MOA UP / ~0.75 MOA LEFT

At 1/4 MOA clicks: approx 3 UP / 3 LEFT.

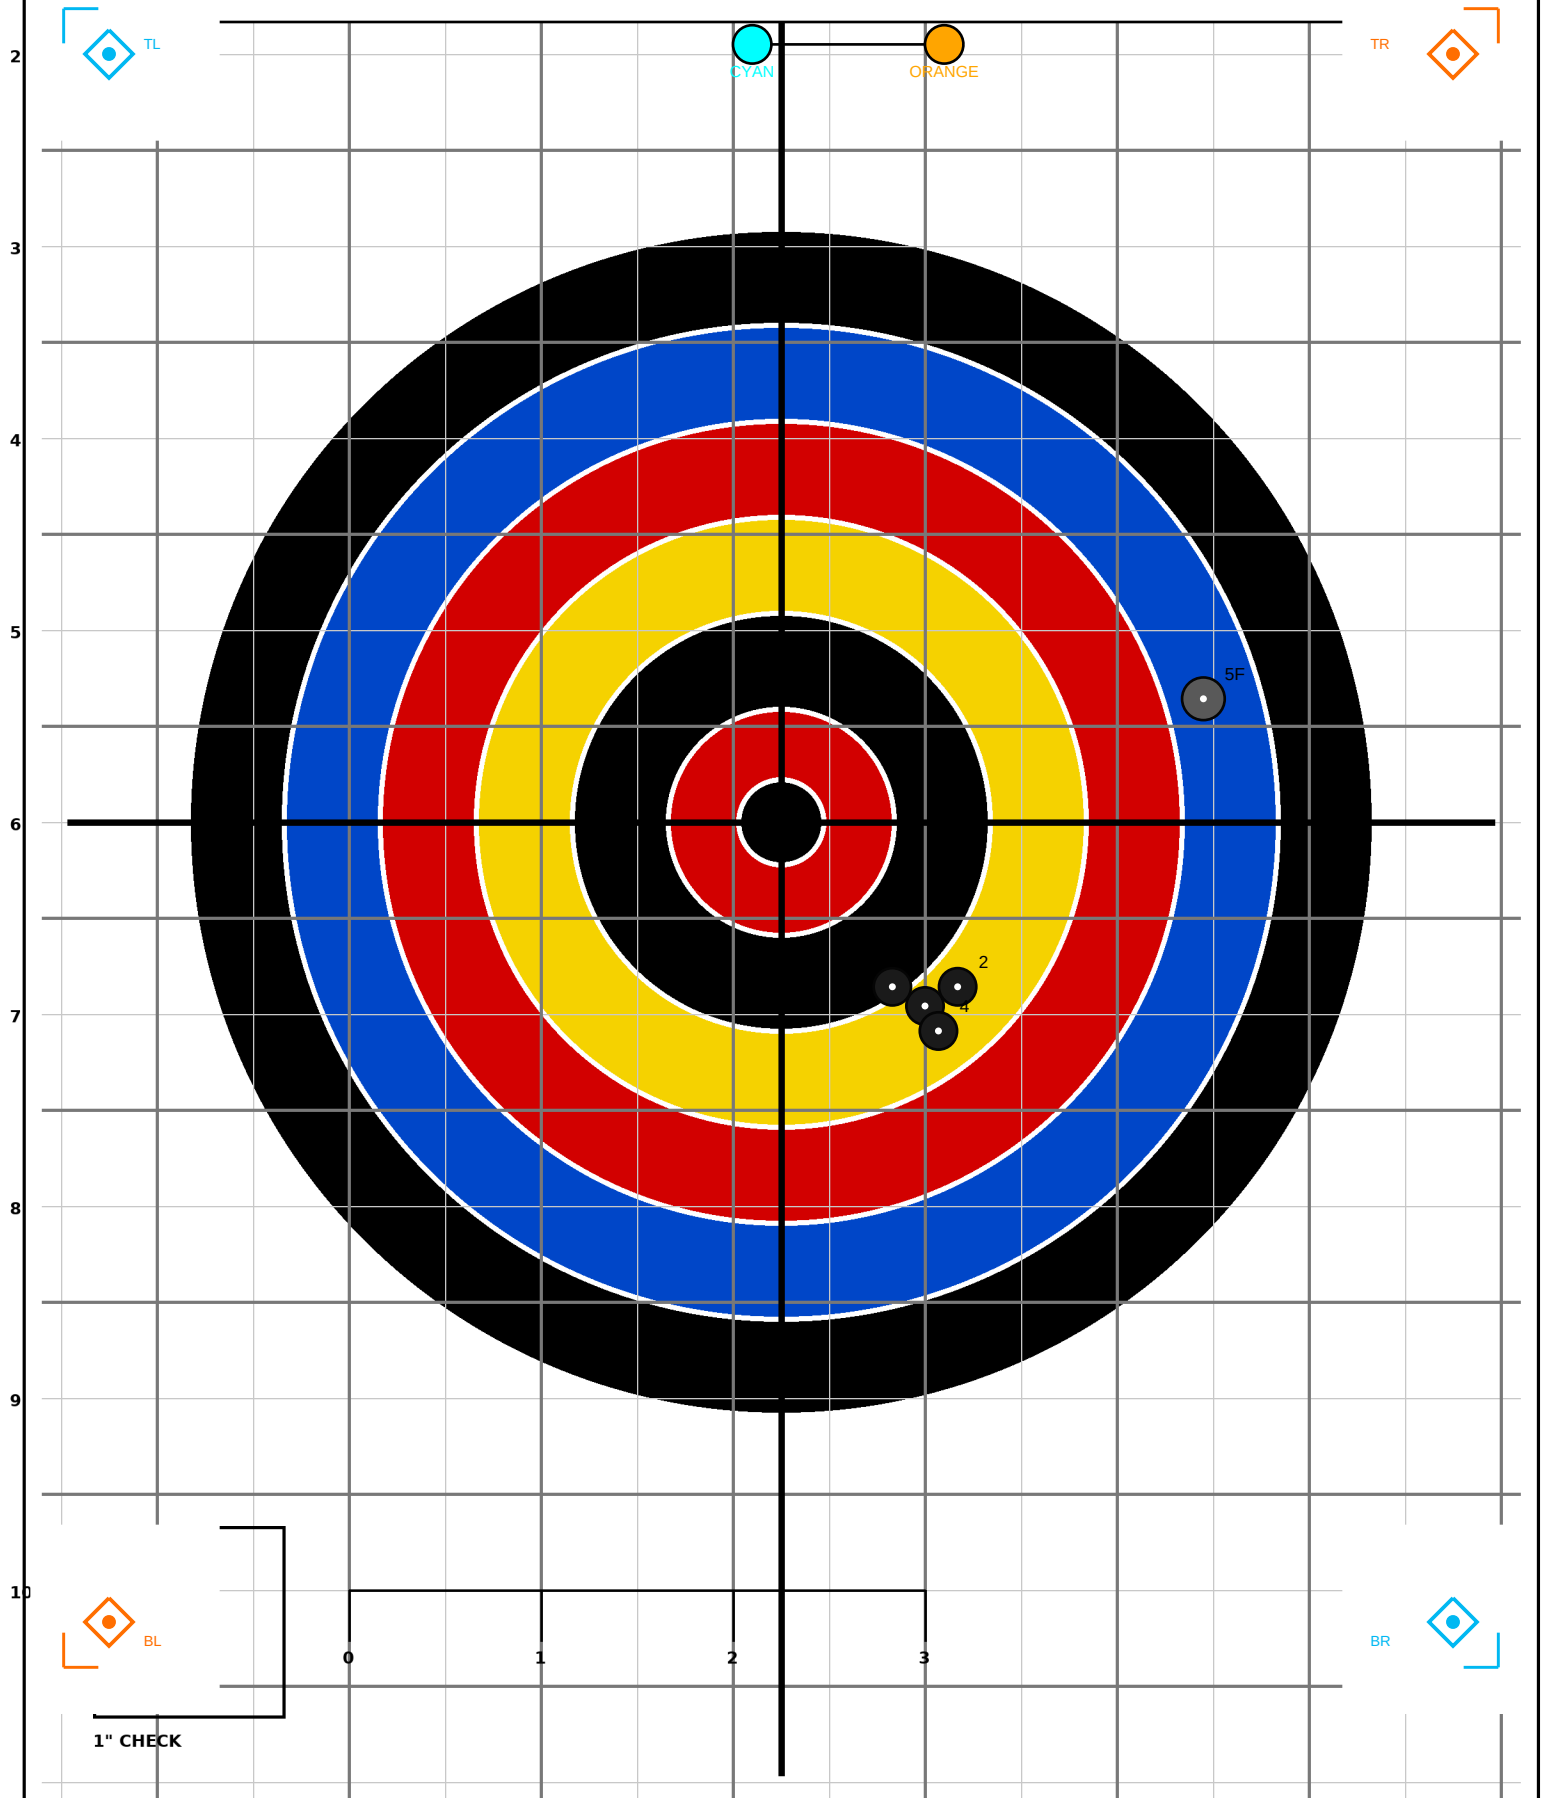

TEST D - FLYER HANDLING - SHOT 5 IS THE FLYER


4-POINT APP ALIGN READY - 2-POINT FALLBACK RETAINED

LIGHT HIGH VIS + COORDINATE - BANDED

TEST E - FUTURE 4-POINT APP ALIGN / PERSPECTIVE CORRECTION PREP

Use this page to plan corner registration and future perspective correction.

Current app may ignore these marks until 4-point APP ALIGN is implemented.

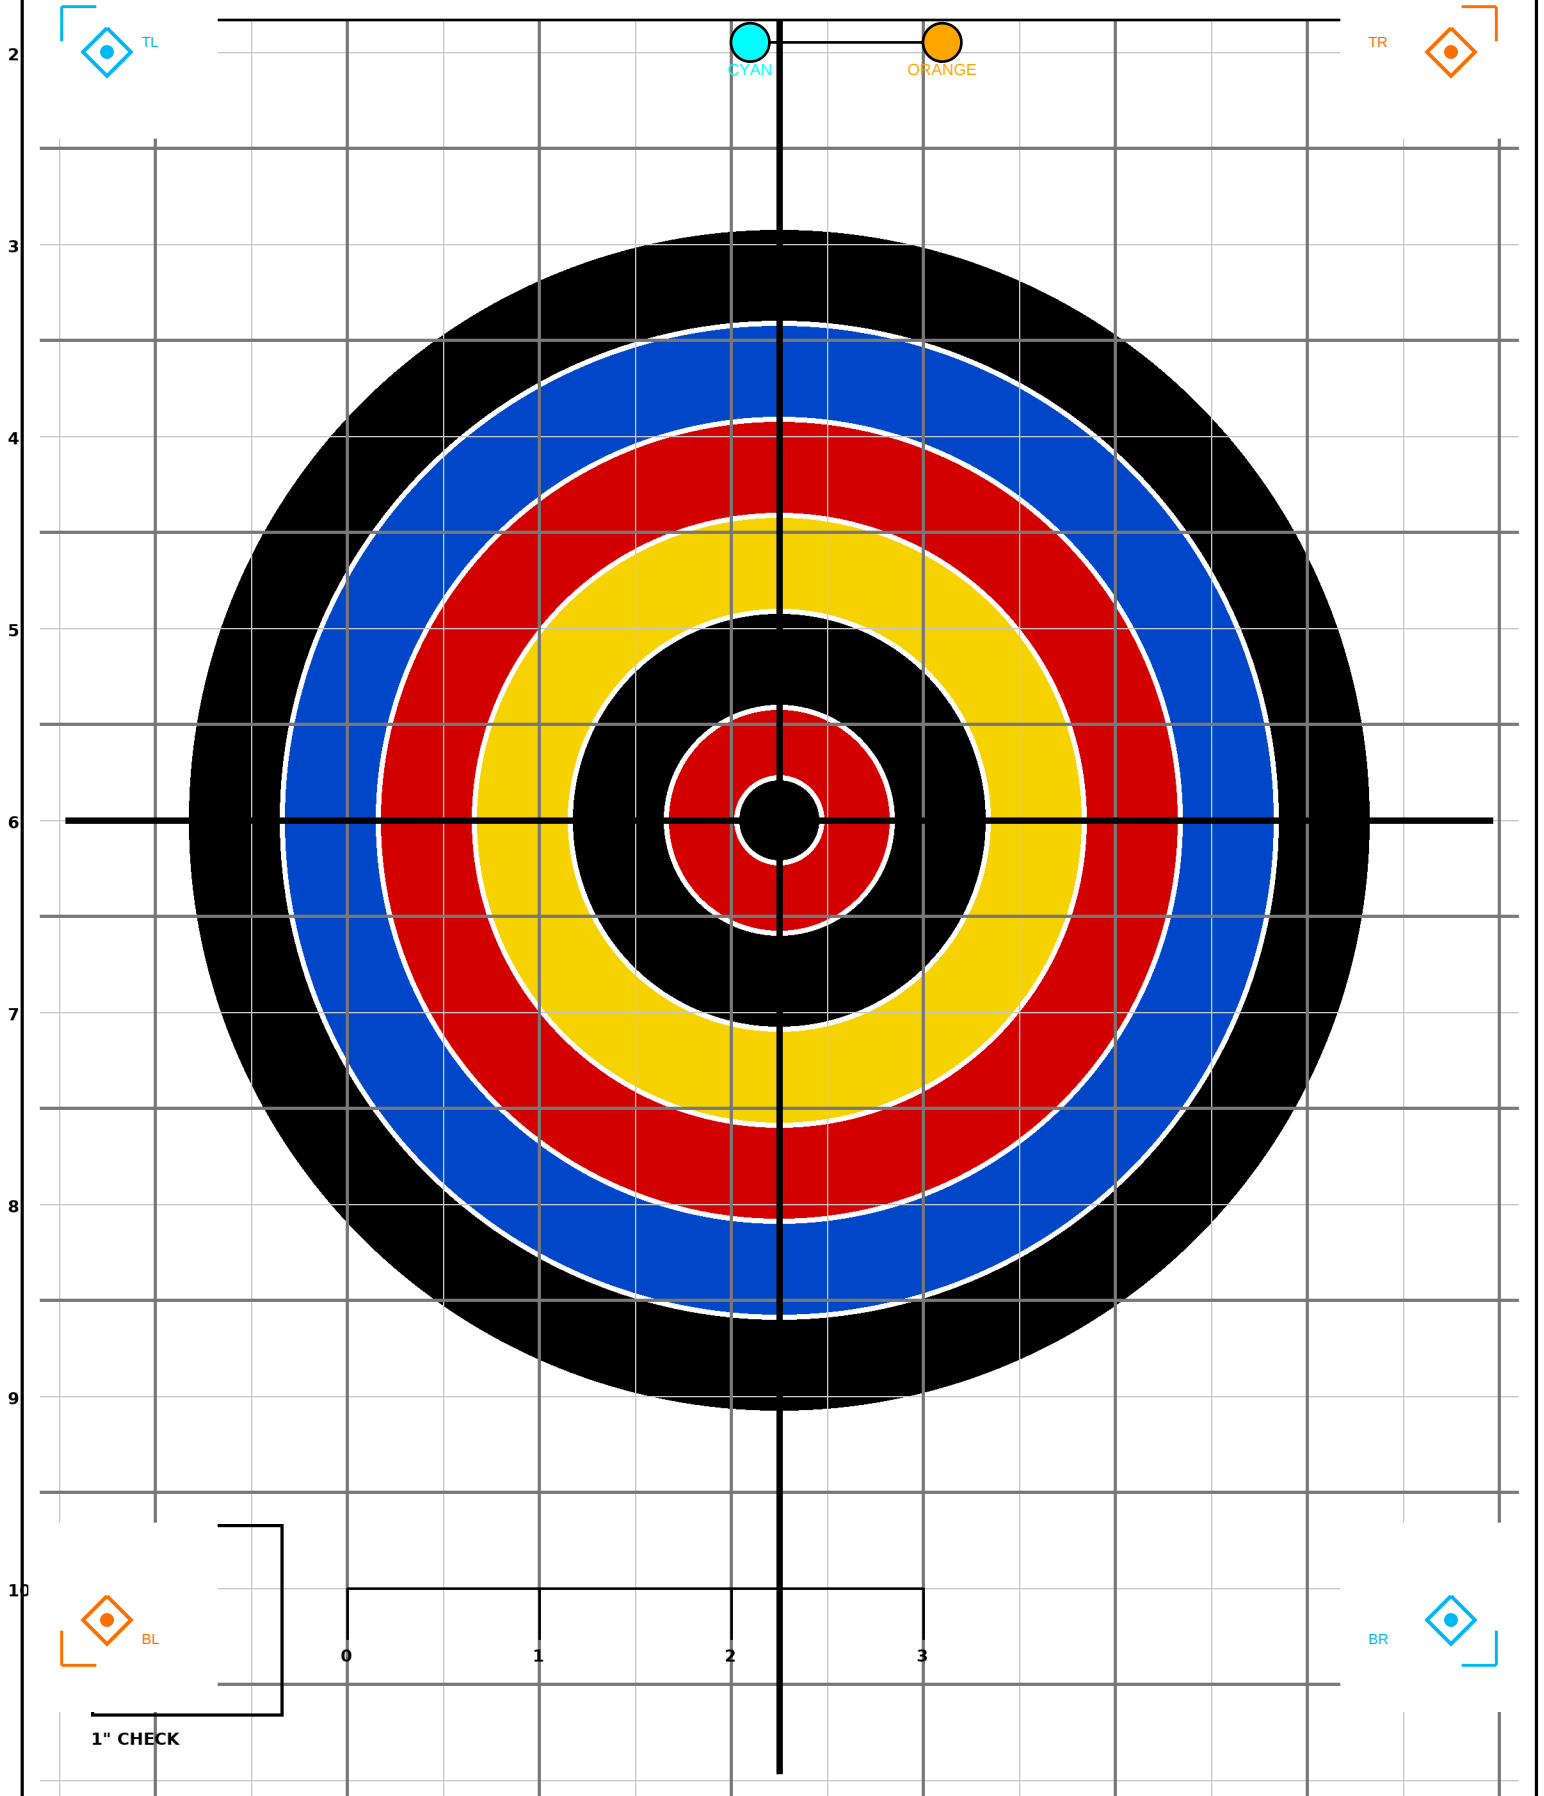

TEST E - 4-POINT APP ALIGN / PERSPECTIVE CORRECTION PREP

4-POINT APP ALIGN READY - 2-POINT FALLBACK RETAINED